



Flood® Wood Cleaner

Premium Wood Cleaner and Brightener

Specification Guidelines

MANUFACTURER

AkzoNobel Decorative Paints, USA
15855 Sprague Road
Strongsville, OH 44136
PHONE: 1-800-321-3444
FAX: 1-440-297-8908
www.flood.com

PRODUCT DESCRIPTION

Flood® Wood Cleaner is a powerful cleaner and brightener which restores gray, weather-beaten exterior wood that is unfinished to its natural color. A strong, economical cleaner, Flood Wood Cleaner gets under and removes surfaces and ground in dirt while restoring a bright, vibrant look to your exterior wood.

BASIC USES

- For exterior use only
- Exterior wood or composite material (decks, furniture, fences and siding, etc.)
- Unfinished exterior wood surfaces that have become gray or dirty (including Cedar, Redwood or Pressure-Treated Wood)
- Previously coated exterior wood surfaces that need to be cleaned

TECHNICAL DATA

VISCOSITY: Thick (concentrate)

WT/GALLON: 9.09 lbs/gal

PHYSICAL STATE: Liquid

FLAMMABILITY: N/A

COMBUSTIBILITY: N/A

FLASH POINT: N/A

SHELF LIFE: 5 years unopened

CONTAINER SIZE: Gallon and 5-gallon

APPEARANCE & ODOR: Blue, fresh soap odor

VOC: Does not exceed 5 g/L

BEFORE YOU START

NOTE: Wear chemical resistant gloves, safety goggles and protective clothing.

- Shake container thoroughly before mixing
- Cover areas you want to protect
- Thoroughly wet plants and shrubs

MIXING DIRECTIONS

NOTE: Do not mix with chlorine bleach or other household cleaning products. To do so can result in release of highly toxic gases. Mix using only plastic containers in a well ventilated area.

FOR MOST JOBS:

- Mix one part Flood Wood Cleaner to four parts water

FOR TOUGH STAINS:

- Mix equal amounts of Flood Wood Cleaner and water

APPLICATION

CAUTION: Surfaces are slippery when wet. Use caution when walking on wet surfaces during application.

GENERAL DIRECTIONS:

1. May damage metal components of spray equipment.
2. Do not apply on a hot surface; product will dry too rapidly.
3. If cleaning vertical wood, work from bottom to top to avoid streaking.
4. Sweep surface clean; wet the surface with fresh water.
5. Apply Flood Wood Cleaner with a garden sprayer, brush, or roller.
6. Work Flood Wood Cleaner into the wood with a stiff nylon or natural bristle brush using a scrubbing action.
7. Allow the solution to stand on wood for 20-30 minutes.
8. Do not allow Flood Wood Cleaner to dry. Keep surface wet with the mixture of cleaner while working.
9. Rinse surface and adjacent areas thoroughly using the highest pressure from a hose or pressure wash between 500-1000 psi.
10. Allow wood to dry 48 hours or ensure moisture content meets finish label instructions.

FOR NAIL STAINS:

1. Clean and wet the surface.
2. Apply Flood Wood Cleaner to the entire surface over and around the nail stain.
3. Do not rinse until the stain has disappeared.

COVERAGE

- When mixed with 4 gallons of water, 1 gallon Flood Wood Cleaner will clean up to 1,000 sq. ft/gal (92.9 sq. m/gal)
- When mixed with 1 gallon of water, one gallon Flood Wood Cleaner will clean up to 400 sq. ft/gal (37.2 sq. m/gal)
- Coverage will vary depending on type, age and texture of wood

CLEANUP & STORAGE

- Cleanup with soap and water
- Store unused portion in tightly closed plastic container
- KEEP FROM FREEZING

AFTER CLEANING

- Protect and enhance the natural beauty of exterior wood with any Flood Brand Finish



MAKES
5 GALLONS
CLEANS 1,000
SQ FT

*continued on reverse side



Flood® Wood Cleaner

Premium Wood Cleaner and Brightener

LIMITED WARRANTY

AkzoNobel Decorative Paints, USA warrants against defects in this product for six (6) months from the date of purchase if applied according to label instructions to a properly prepared surface. If this product fails to perform in accordance with this warranty, AkzoNobel Decorative Paints, USA will, at its option, provide an equivalent amount of new product at no charge or refund the purchase price. This warranty does not include labor or the cost of application of any product, and in no event shall AkzoNobel Decorative Paints, USA be responsible for damages in excess of the purchase price. Claims must be made in writing and accompanied by proof of purchase. This warranty does not apply to problems caused by alteration of this product, accident, misuse, improper storage, abuse, or neglect. THERE ARE NO OTHER EXPRESS WARRANTIES. IN NO EVENT SHALL AKZO NOBEL DECORATIVE PAINTS, USA BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF THIS WARRANTY OR ANY IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR USE. Some states do not allow the exclusion or limitation of incidental or consequential damages so the above limitation may not apply to you. This warranty gives you specific legal rights and you may have other rights which may vary from state to state.

WARNING! CONTAINS: OXALIC ACID, HARMFUL IF SWALLOWED, CAN CAUSE SEVERE EYE AND SKIN IRRITATION, MAY CAUSE NOSE AND THROAT IRRITATION. For exterior use only. Avoid contact with eyes, skin and inhalation of vapors. Wear chemical resistant gloves, safety goggles and protective clothing. If vapors or mist are generated while applying or removing, wear a NIOSH/MSHA respirator. Change clothes and wash thoroughly when finished. **FIRST AID:** In case of **eye or skin contact**, flush with water continuously for 15 minutes. If swallowed, drink large amounts of water, do not induce vomiting. **Get medical attention** immediately in all cases of eye contact or ingestion or if skin irritation persists. In case of spillage, absorb with inert material and dispose of in accordance with local regulations. **KEEP OUT OF REACH OF CHILDREN.**



©2008 AkzoNobel Decorative Paints, USA
Reorder #M04406 - GL 9/08

**For additional information or assistance,
write or call toll-free: 1-800-321-3444.**

AkzoNobel Decorative Paints, USA
15855 Sprague Road
Strongsville, OH 44136

www.flood.com

Flood® is a trademark of
AkzoNobel Decorative Paints, USA.