


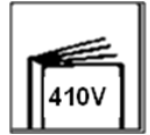

AquaMax GUN CLEANER 1.936.1100

THINNER FOR CLEANING GUN AFTER USE WITH AQUAMAX

Aquamax Guncleaner is a waterbased product designed to facilitate the cleaning of equipment used in the application of Aquamax.
It also easily removes any paint and dirt on the external parts of the gun.



USE

Thoroughly clean the spraygun with water, or directly with **AquaMax Guncleaner** and dry with a clean cloth. It is recommended that the equipment is cleaned immediately after use, to avoid the drying and forming of a crust which is difficult to remove, and which could compromise the efficiency of the spraygun.



DISPOSAL

Aquamax Guncleaner should be disposed of properly & in accordance with all local authority regulations. Under no circumstance should the waste be disposed of into a public sewer without obtaining specific advance authorisation from the local or national water authority.

TECHNICAL DATA

Pack size 5 Ltr
Storage Store in cool dry place away from heat.



VOC INFORMATION

The EU limit value for this product (product category: IIB.a) in ready to use form is max. 850g/litre of VOC. The VOC content of this product in ready to use form is max. 850g/litre.

SAFETY AND HANDLING

These products are for professional use only and are not to be used for purposes other than those specified. The information on this TDS is based on present scientific and technical knowledge, and it is the responsibility of the user to take all necessary steps in order to ensure the suitability of the product for the intended purpose.

For Health and Safety information, please refer to the material Safety Data Sheet, also available at:
www.maxmeyer.com



For further information please contact:

PPG Industries (UK) Limited. MaxMeyer Division Customer Service & Sales Group, Needham Road, Stowmarket, Suffolk. IP14 2AD, England. Tel: 01449 771779 Fax: 01449 773495

MaxMeyer and the MaxMeyer logo are trademarks of PPG industries.
© 2011 PPG Industries. All rights reserved.